FORWARD AM
Innovating Additive Manufacturing

BASF
We create chemistry

Ultracur3D® RG 9400 B FR

User Guideline

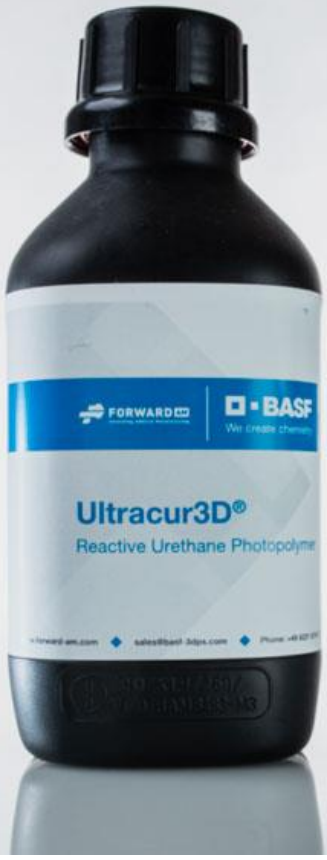

INTRODUCTION

The following user guideline is for professionals who use: Ultracur3D® RG 9400 B FR.

The safety data given in this publication is for information purposes only and does not constitute a legally binding Material Safety Data Sheet (MSDS). The relevant MSDS can be obtained upon request from your supplier or you may contact BASF directly at sales@basf-3dps.com.

For more information, please refer to the country specific MSDS for advice.

STORAGE CONDITIONS AND DISPOSAL CONSIDERATIONS

Keep container tightly closed in a room temperature, well-ventilated place. Keep container dry. If material is not being used, fill it back through a filter in the corresponding material bottle. The filter prevents cured pieces or failed prints from going back into the bottle. Ultracur3D® RG 9400 B FR must be disposed of in accordance with local regulations.

For more information, please refer to the country specific MSDS for advice.

Version 1.0

INTENDED USE

Ultracur3D® RG 9400 B FR is a technical material based on (meth-)acrylate resin for suggested LCD and DLP systems. Working wavelength: 385 nm or 405 nm. Below, you can find some suggested 3D printers and printing parameters. For more information contact BASF directly at sales@basf-3dps.com.

EXAMPLES OF SUITABLE 3D-PRINTERS AND SETTINGS

	Wavelength	Power	Curing time	Voxel depth
MiiCraft Ultra 125	405 nm	4 mW / cm²	3.5 s	100 µm
MiiCraft Ultra 125 Y	385 nm	4 mW / cm²	2.5 s	100 µm
Rapidshape i30+®	385 nm	2 mW / cm²	3 s	100 µm
Stratasys Origin One	385 nm	5 mW / cm²	3 s	100 µm

If you cannot find your printer in the table, you can use the values below as starting parameters. These are only approximations, different 3D printers may require different curing times and further optimization, but these values should be a good starting point.

The given values are all for printing at a layer thickness / voxel depth of 100 µm. If you need starting parameters for a different layer thickness, please contact us.

405 nm Wavelength 3D Printer

Power*	5 mW / cm²	4 mW / cm²	3 mW / cm²	2 mW / cm²
Suggested curing time	3.5 s	4.4 s	5.8 s	8.75 s

385 nm Wavelength 3D Printer

Power*	5 mW / cm²	4 mW / cm²	3 mW / cm²	2 mW / cm²
Suggested curing time	3.5 s	4.4 s	5.8 s	8.75 s

* Power measured directly on the glass

PREHEATING

Ultracur3D® RG 9400 B FR will slowly form crystals and solidify after longer periods of storage, especially if kept at colder temperatures. Therefore, a preheating of the material is required before starting any prints.

- Step 1: Preheat the material for 5 hours at 40°C.
- Step 2: Check if there are any crystals or lumps present. If there are, continue preheating.
- Step 3: Shake the bottle/canister to be sure everything is mixed well.
- Step 4: Pour it slowly into the vat and wait a couple of minutes, until a smooth, bubble-free surface is obtained before starting the print job.

PRINTING PROCESS

If the material is kept/used at room temperature (23°C), it will stay fully liquid for about 3 days. After this, small crystals may start forming again, so a new preheating step will be required before starting another print.

The 3D printer examples and settings stated above are only for general guidance. The fully optimized settings should always be determined by the users themselves, according to their specific needs. Please always refer to the user manual of the employed 3D printer for instructions on printer settings and handling.

Remove the parts carefully from the build platform with a suitable tool, for more information, refer to the user manual of the used 3D printer.

CLEANING AND POST CURING PROCESS

Ultracur3D® RG 9400 B FR can be cleaned with a Glycol Ether based solvent like Ultracur3D® Cleaner and 2-propanol, please refer to the following cleaning procedure.

Cleaning with Ultracur3D® Cleaner and 2-propanol

- Step 1: Place the parts in a container filled with Ultracur3D® Cleaner and place this container in an Ultrasonic bath filled with water for 3 minutes. The cleaning time can vary depending on the complexity of the printed geometry.
- Step 2: Rinse the parts with 2-propanol for a few seconds. Fine structures or holes may be better cleaned by using 2-propanol and a syringe or by separate brushing. Next, place the parts in a container filled with 2-propanol and place this container in an Ultrasonic bath filled with water for 3 minutes.
- Step 3: Blow dry the parts with pressurized air or nitrogen, until the parts are clean.
- Step 4: Place the parts into a warming cabinet at 40°C for 30 minutes to dry off any remaining cleaning solvent.

EXAMPLES OF POST CURING PROCEDURES

Ultracur3D® RG 9400 B FR parts require adequate post-curing to achieve the optimal mechanical properties. After each post-curing cycle, the parts need to be flipped to achieve an even curing. After post-curing, remove any support structures and smoothen the surface if required. Ultracur3D® RG 9400 B FR can be post-cured using regular UV post-curing. Optionally, after UV post-curing, an additional thermal treatment can be done to improve the HDT. Refer to the procedures below for optimal post-curing.

	UV lamp	Power in mW / cm²	Duration of post-curing	Notes
Dymax ECE 2000 flood	Hg Metal Halide Bulb (broad spectrum)	Ca. 140 mW / cm² at 405 nm	2 x 900 seconds	Shelf height K
OtoFlash G 171	Flash-bulbs (broad spectrum)	Ca. 3.5 mW / cm² at 405 nm	2 x 9000 flashes	With Nitrogen

EXAMPLES OF ADDITIONAL THERMAL TREATMENT AFTER UV POST-CURING (OPTIONAL!)

	Thermal Oven	
Ramp up phase	2 hours	30 °C to 150 °C (ca. 86 °F to 302 °F)
Holding phase	3 hours	150 °C (ca. 302 °F)
Ramp down phase	2 hours	150 °C to 30 °C (ca. 302 °F to 86 °F)

These proceedings are only general guidelines. In the end, the user has to determine the optimum post-curing procedure based on their specific requirements and the equipment used.

forward-am.com +49 6221 67417 900 sales@basf-3dps.com